


Center control operation manual (T29)


The following is the legend and operation instructions of the center control operation panel

system starting up screen

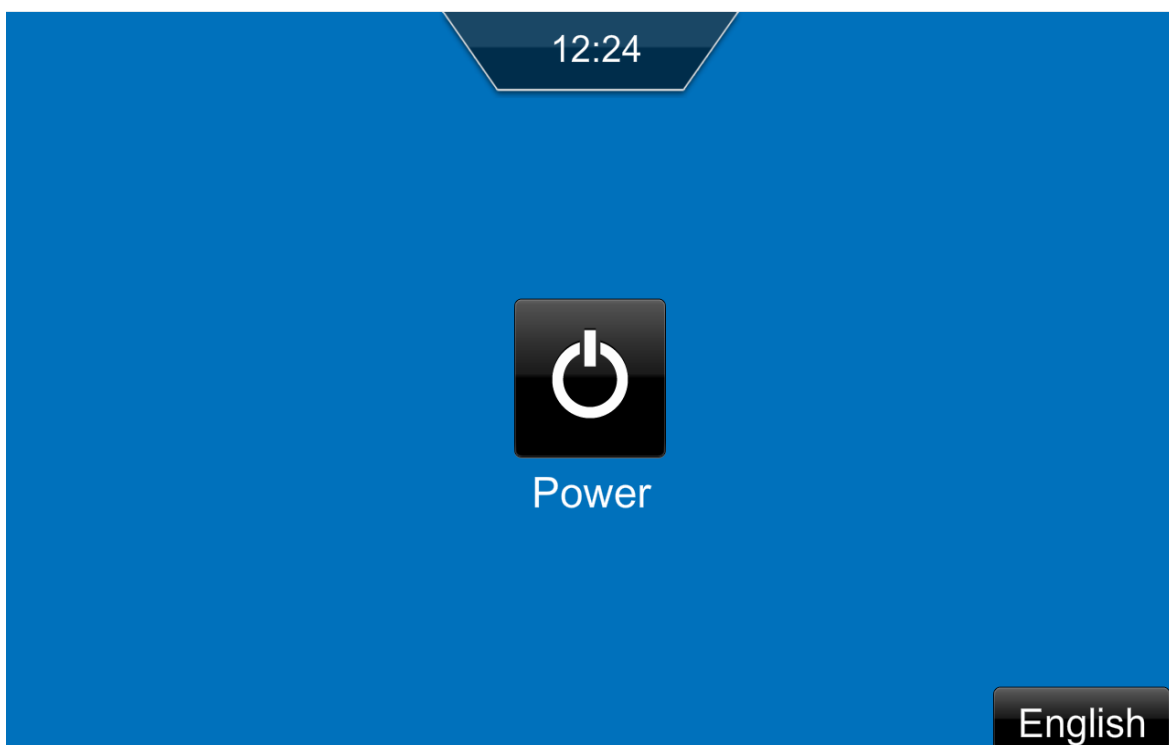

- 1、 press the power button on the screen to turn on all the external devices
(computer、 projector、 projection screen、 power amplifier、 sound、 AC、 lights、 recording and broadcasting system)
- 2、 change the language of the system in the lower right corner (中文/English)

System shutdown screen

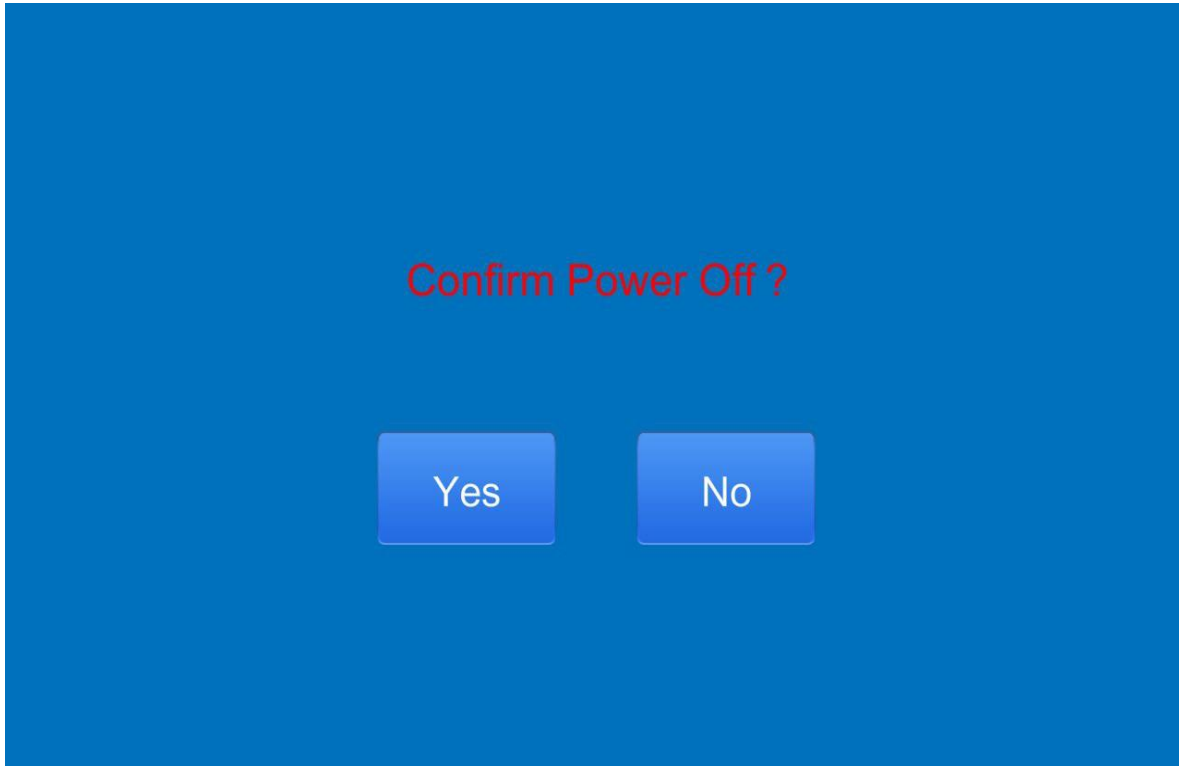

the above interface will be displayed;


- 1、 press No to return to previous screen;
- 2、 press Yes to shut down the whole system of the classroom, press No to return to the previous screen.

operation interface of projector




- 1、press Power ON/Power OFF to switch on/off the projector
- 2、press Projector Screen to rise and fall the projection screen

operation interface video signal source

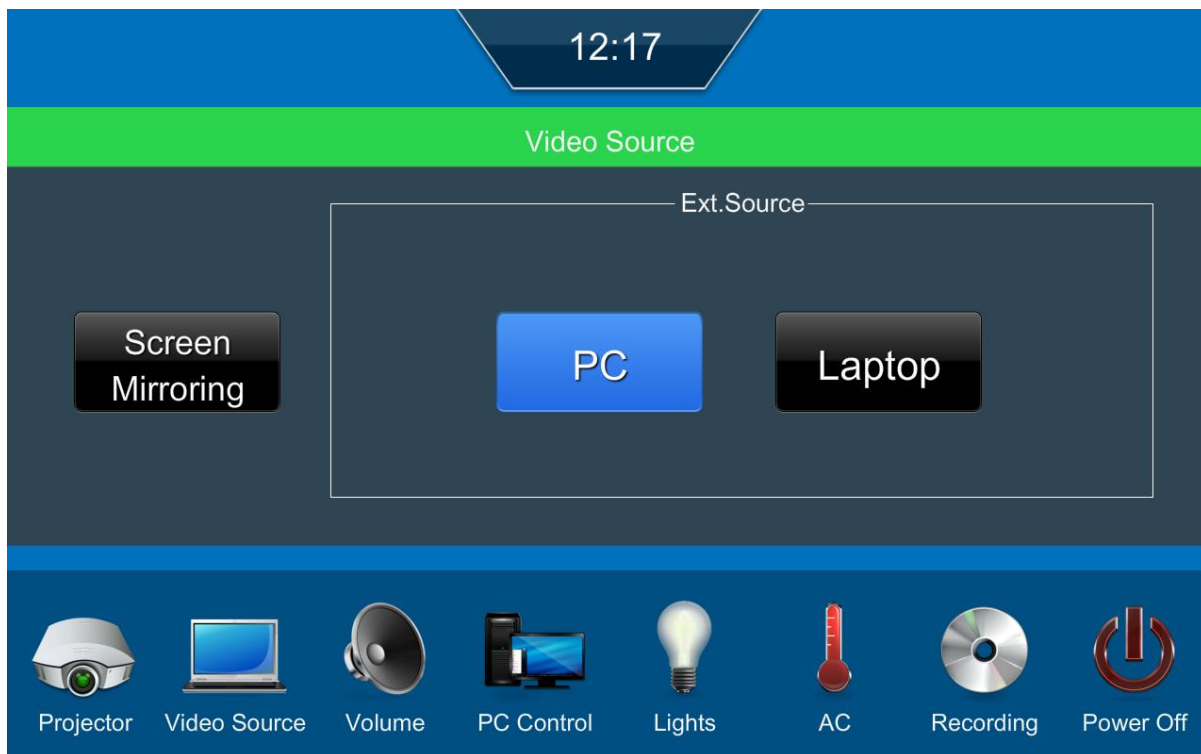


- 1、 The default video startup signal is PC,
- 2、 To connect external notebook please select Laptop,
- 3、 Screen Mirroring is wireless projection, After selecting this function, the connection mode is as prompted on the large screen.

operation interface of audio signal source

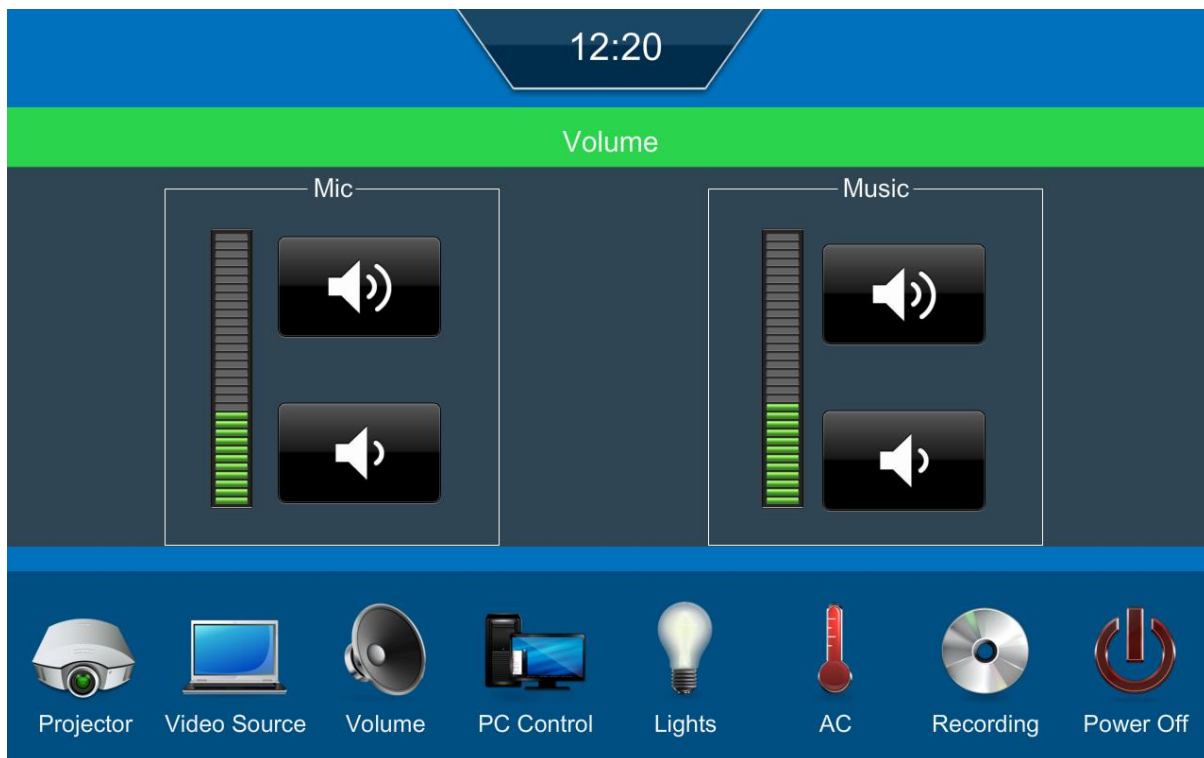

- 1、Mic is used to adjust the volume of wired microphone;
- 2、Music is the one to adjust the computer external volume.


operation interface of computer switch

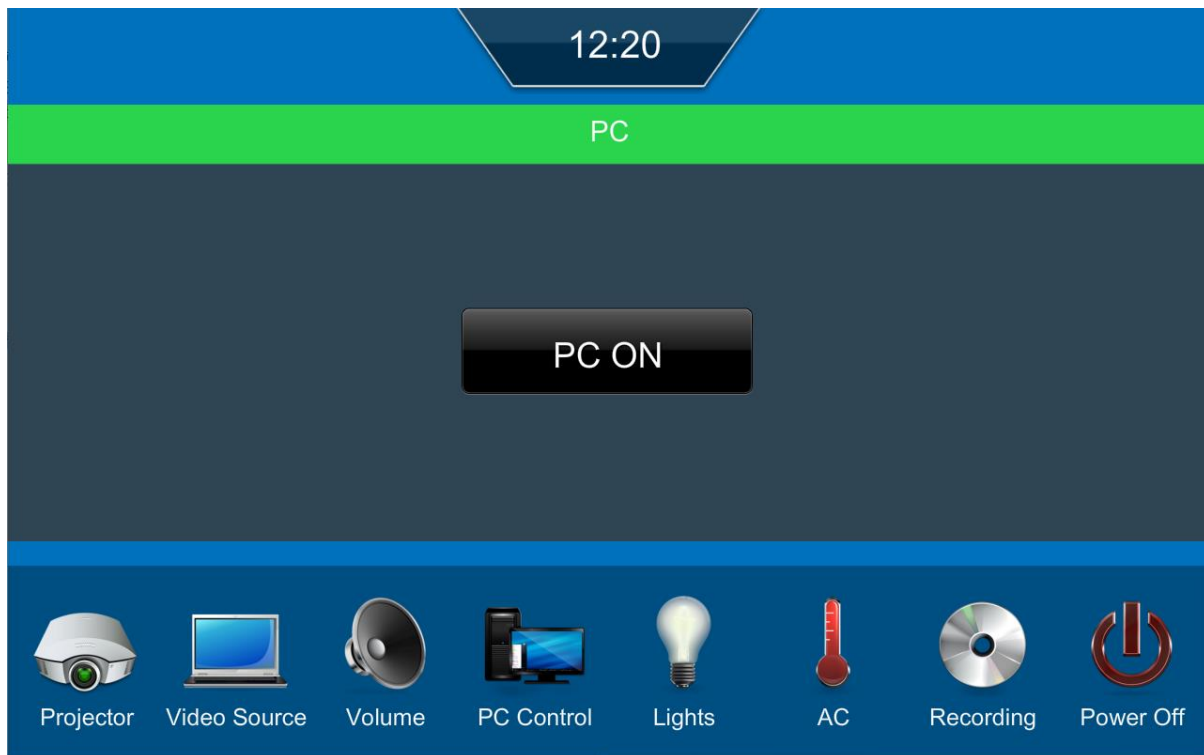

1、 this interface can individually control the on/off of the computer.


ATTENTION: Do not frequently switch on or off the computer

Operation interface of the lights

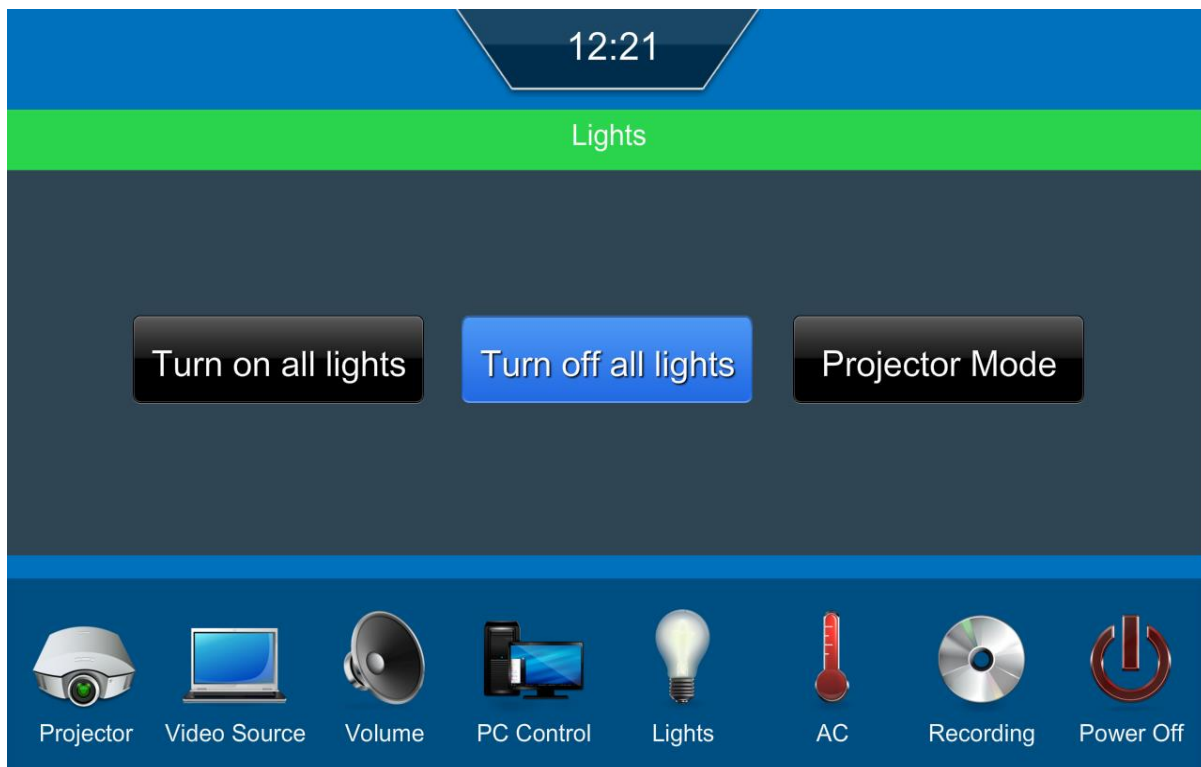

- 1、 Turn on all lights
- 2、 Turn off all lights
- 3、 Projector Mode, to turn off the front lights of the projection screen.

Operation interface of the AC

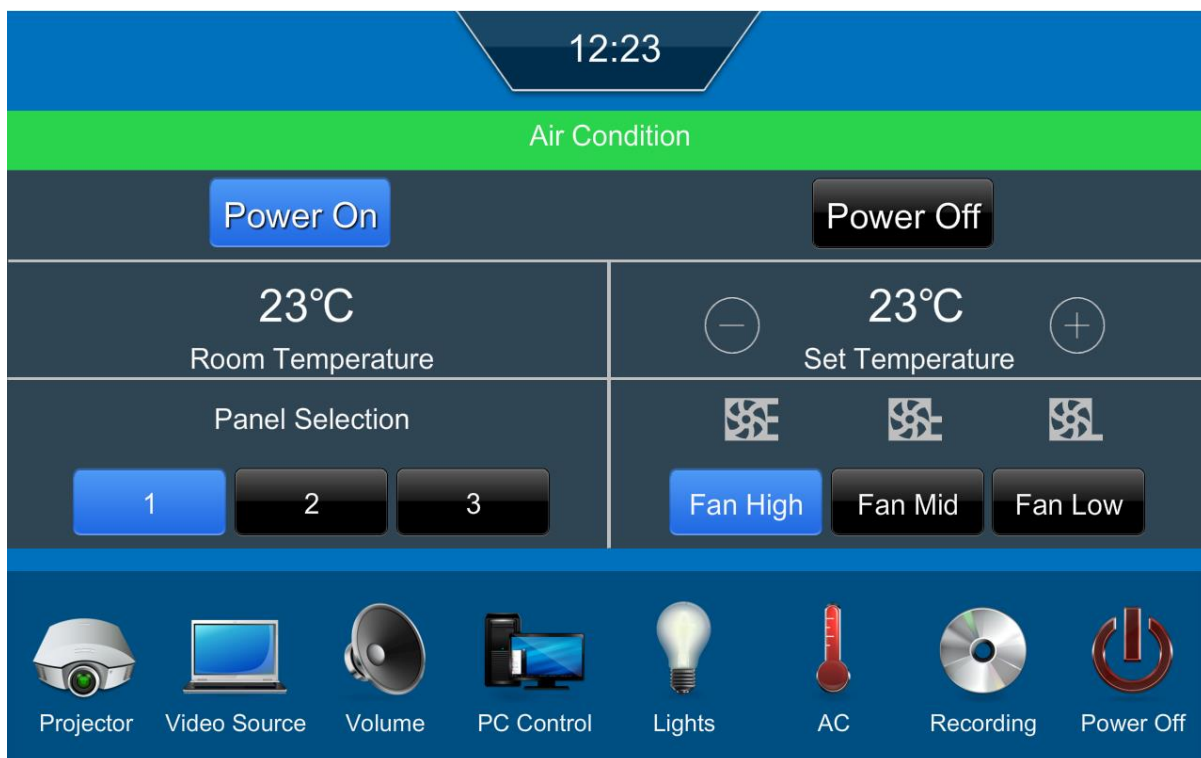


Power On/Power Off

Panel Selection, first select the panel, then perform the following controls.

Set Temperature, to set temperature of the AC

Fan High/Fan Mid/Fan Low are the mode of the wind velocity.

Operation interface of recording and broadcasting (further notice regarding the official date of starting using the recording and broadcasting system will be given later)

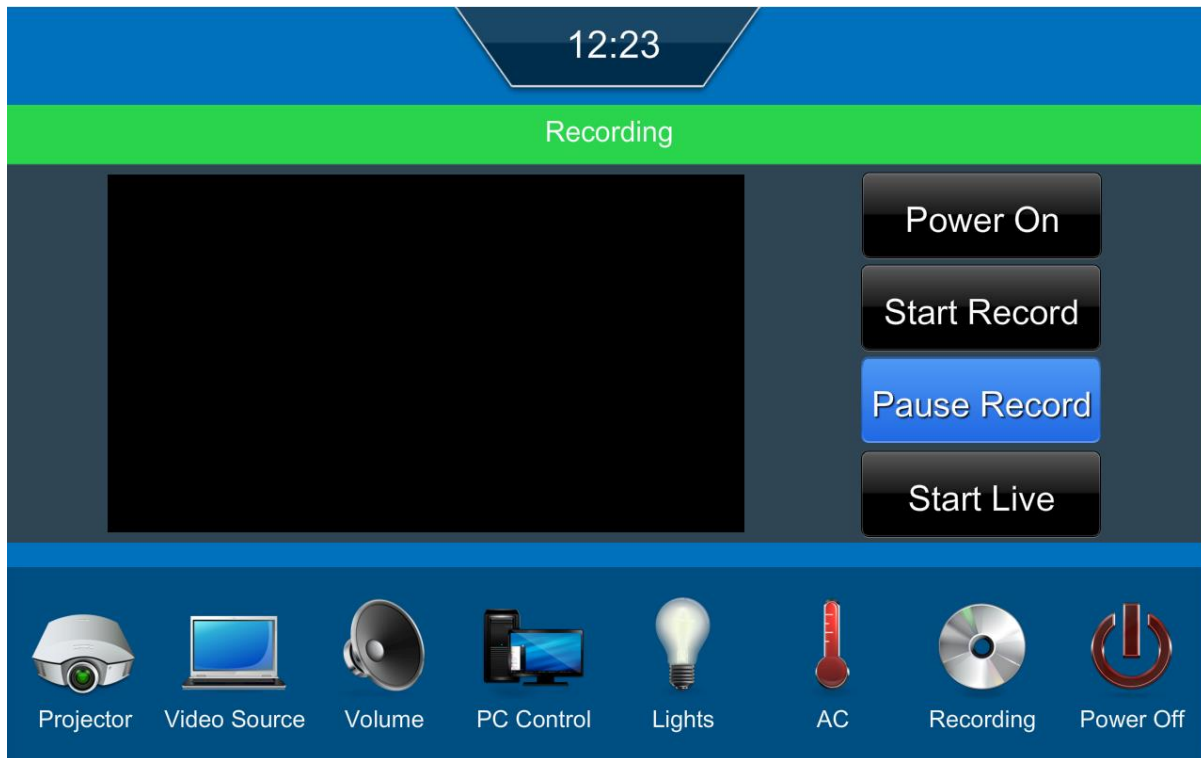

Power On is the power switch of the recording and broadcasting

Start Record controls start recording or stop recording

Pause Record is to pause recording

Stop Live controls to start or stop live streaming

ATTENTION:

The text version of the center control operation guide is stuck onto the desktop

The computer switch has been integrated into the center control system, staffs do not need to individually switch the computer .